

TF03 Long-Distance LiDAR
Rs485/RS232
Product Manual V1.3.2



Specified Product

Product model: TF03 UART/CAN

Product Name: Long-Distance LiDAR

Manufacturer

Company name: Benewake (Beijing) Co., Ltd.

Address: NO.28 Xixi Road, Haidian District, Beijing, PRC

Copyright

The Copyright of this document is protected. All the rights involved herein belong to Benewake (Beijing) Co., Ltd. Any copy activity of this document, no matter in whole or in part, should be in conformity of the Copyright Law. The actives of modification, omission or translation of this document are not allowed unless a written permission from Benewake (Beijing) Co., Ltd.

All rights reserved © Benewake (Beijing) Co., Ltd.

Foreword

Dear users:

Thanks for choosing Benewake products, and it's our pleasure to help you to solve any technical question.

For the purpose of offering a better operation experience to you, we hereby write this manual for an easier and simpler operation of our product, hoping to better solve the common problems you maybe meet. Please contact us if you have any questions.(bw@benewake.com)

This operation manual covers the product operation introduction and common problem solutions, but it is really hard to cover all the problems you maybe meet. So if you have any further questions or problems, please feel free to consult our technical support service (support@benewake.com). We will do our best to solve any problem related to the product. If you have any other good advice or suggestions, welcome to visit our official website and offer us your feedback there (<http://en.benewake.com/support>), and we are looking forwards to your participation.

We are Benewake who dedicated to making the best “Robotic Eyes” worldwide!



Catalog

<u>1</u>	<u>ATTENTIONS</u>	<u>6</u>
1.1	ABOUT THIS DOCUMENT	6
1.2	INSTALLATION AND MAINTENANCE	6
1.3	CONDITIONS WITH POTENTIAL PRODUCT FAILURE	6
<u>2</u>	<u>INTRODUCTION</u>	<u>7</u>
2.1	APPEARANCE OVERVIEW	7
2.2	DIMENSIONS	7
2.3	PRINCIPLE OF MEASUREMENT	7
2.4	DETECTION ANGLE DESCRIPTIONS	8
<u>3</u>	<u>PHYSICAL INTERFACE</u>	<u>9</u>
3.1	WIRING	9
3.2	ELECTRICAL CHARACTERISTICS	10
<u>4</u>	<u>HARDWARE AND COMMUNICATION PROTOCOL</u>	<u>11</u>
4.1	HARDWARE PROTOCOL	11
4.2	COMMUNICATION INTERFACE	11
<u>5</u>	<u>CUSTOM CONFIGURATION</u>	<u>12</u>
5.1	PROTOCOL DESCRIPTION	12
5.2	INSTRUCTION PROTOCOLS	13
5.3	INSTRUCTIONS OF COMMAND EDITING	15
<u>6</u>	<u>MODBUS DESCRIPTION</u>	<u>15</u>
6.1	PROTOCOL DESCRIPTION	15
6.2	FUNCTION CODE	16



6.3 REGISTER ADDRESS DESCRIPTION 16

6.4 INSTRUCTION PROTOCOLS 17

7 QUICK TEST PROCEDURE..... 18

7.1 REQUIRED TOOLS OF PRODUCT TEST 18

7.2 TEST PROCEDURE..... 18

7.3 TEST EXAMPLE 20

7.3.1 TEST RANGE WITH DIFFERENT REFLECTIVITY..... 20

7.3.2 ACCURACY OF DIFFERENT MATERIALS..... 20

8 CONFIGURATION SOFTWARE OF TF03..... 21

9 FAILURE REASONS AND TROUBLESHOOTING 22

10 FAQ 23

ATTACHMENT 1: REFLECTIVITY OF DIFFERENT MATERIALS 24



1 Attentions

1.1 About this Document

- This Manual provides information necessary for the use of this product.
- Please read this Manual carefully before using this product and make sure that you have fully understood its contents.

1.2 Installation and maintenance

- This product can only be maintained by qualified professionals and only the original spare parts can be used to ensure its performance and safety.
- The working temperature of the product is $-25^{\circ}\text{C}\sim 60^{\circ}\text{C}$; please do not use it beyond this temperature range, so as to avoid risks.
- The storage temperature of the product is $-40^{\circ}\text{C}\sim 85^{\circ}\text{C}$; please do not store it beyond this temperature range, so as to avoid risks.
- Do not open its enclosure for assembly or maintenance beyond this Manual; otherwise, it will affect the product performance.
- Do not twist the cable forcefully, so as to avoid damage to product.
- The product can't be aimed directly to the sun or another TF03, so as to avoid damage the detector by strong light. If there is such an application, please contact our technician.

1.3 Conditions with Potential Product Failure

- When the product transmitter and receiver lens are covered by dirt, there will be a risk of failures. Please keep the lens clean.
- The product will have a risk of failure when immersed completely in water. Do not use it underwater.
- When detecting objects with high reflectivity, such as mirrors and smooth tiles, the product may have a high risk of failures.

2 Introduction

2.1 Appearance Overview

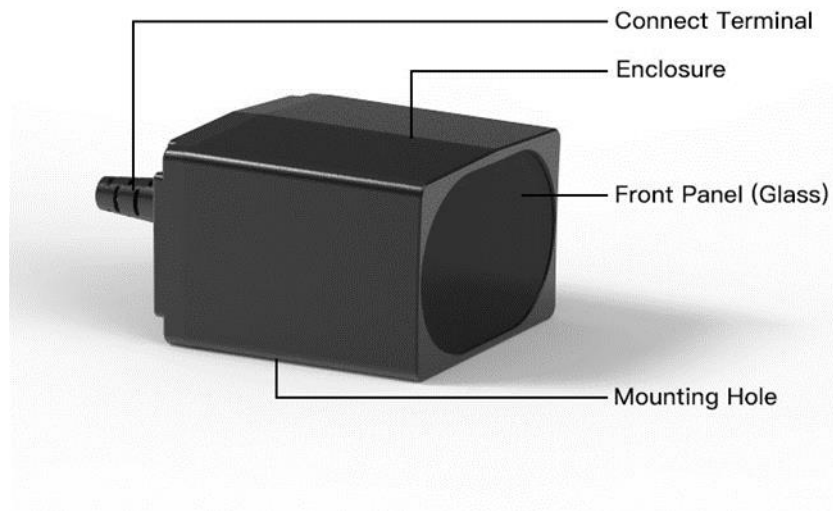


Figure 1 Appearance

2.2 Dimensions

The LiDAR mounting holes are applicable to M3 screws.

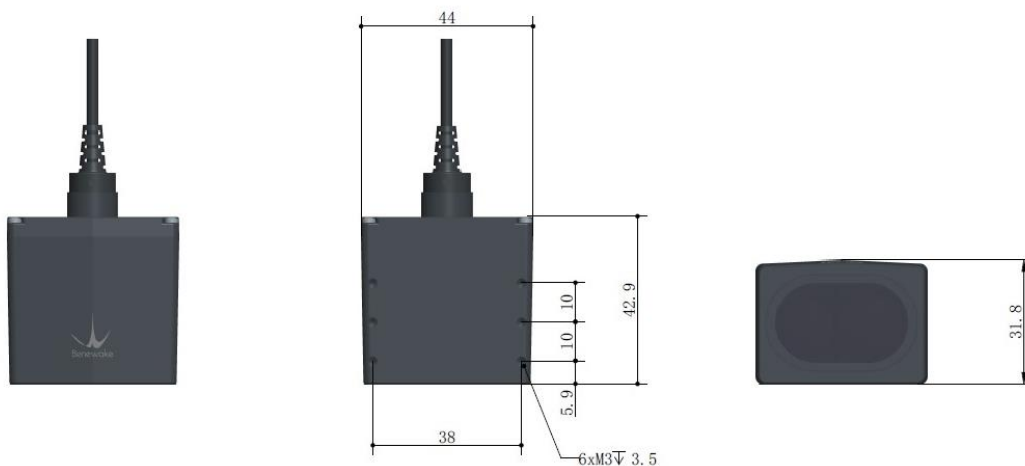


Figure 2 Dimension (Left 1: top; Left 2: bottom; Left 3: front; Unit: mm)

Note: The length of the screw entering the enclosure shall be no more than 3.5mm.

2.3 Principle of Measurement

TF03 is a single point LiDAR, which is based on Pulse Time of Flight (PTOF). It adopts an incoherent energy receiving mode, and the detection is mainly based on Pulse counting.

TF03 emits a narrow pulse laser, which is collimated by the transmitting lens to form a collimated



light, which enters the receiving system after being reflected by the measured target and is focused on the APD detector by the receiving lens. The time between the transmitted signal and the received signal is calculated through the circuit amplification and filtering, and the distance between TF03 and the measured target can be calculated through the speed of light.

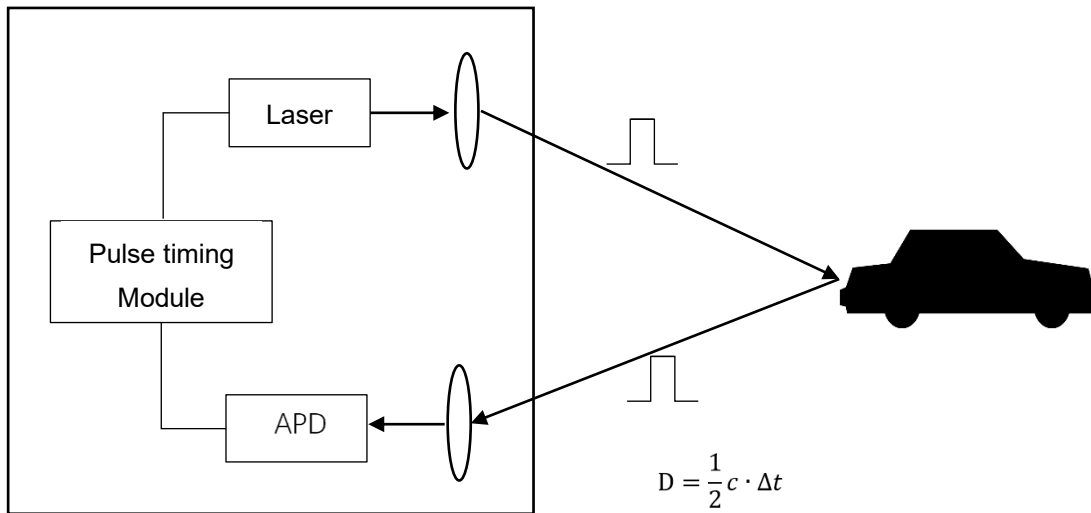


Figure 3 Principle of measurement

2.4 Detection angle descriptions

TF03 has a 0.5-degree detection angle and rectangular light spot, see Figure 4 for simulated diagrams of the light spot. Therefore, at different distances, the spot size, namely detecting range, is different as shown in Table 1.

Note: The side length of common objects detected should be greater than that of the detection range of TF03; When the side length of the detected object is less than that of the detection range, the LiDAR effective range will be reduced

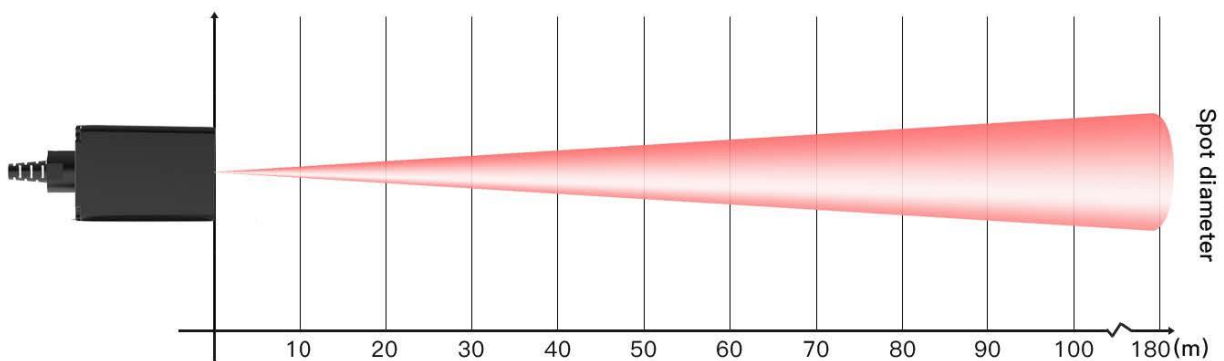
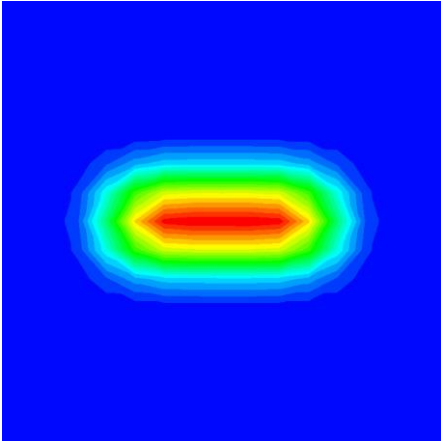
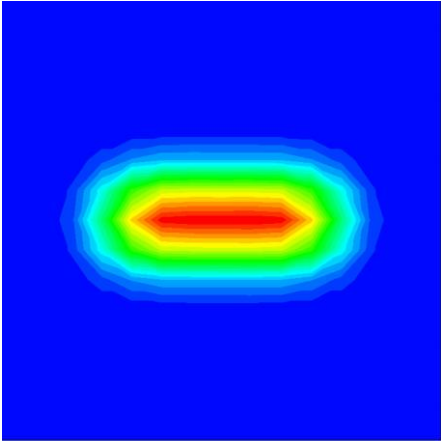
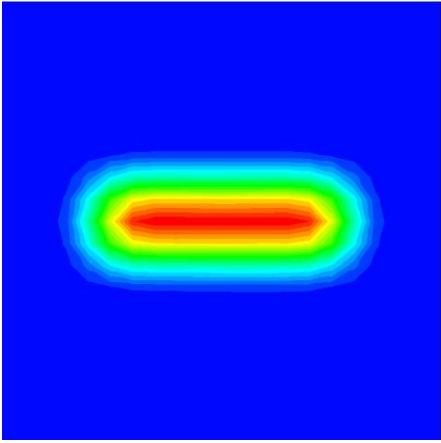
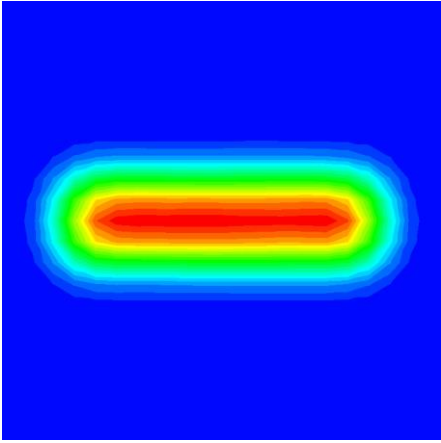


Figure 4 Detection angle of TF03



Table 1 Spot simulated diagrams and sizes at different distances

			
Spot 20m away	Size: 20cm*6cm	Spot 50m away	Size: 50cm*14cm
			
Spot 100m away	Size: 100cm*28cm	Spot 150m away	Size: 150cm*42cm

Note: In these pictures, color represents the light intensity distribution, the red is the strongest, the green is weak, the blue is the background. The spot size is the length and width of the green in the picture.

3 Physical Interface

New version of TF03-100/180 is released since August 2020, the physical interface is adjusted as follows:

- Bold cable, the size of single wire is changed from AWG30 to AWG 26
- Remove a wire, the amount of wire is 6 now, color is shown in Figure 5
- Add overvoltage and polarity protection, shown as Table 3

3.1 Wiring

Terminal model: MH1.25-7P-W/B, size of single wire is AWG26, diameter of single wire is



0.404mm, cross-sectional area is 0.129mm².

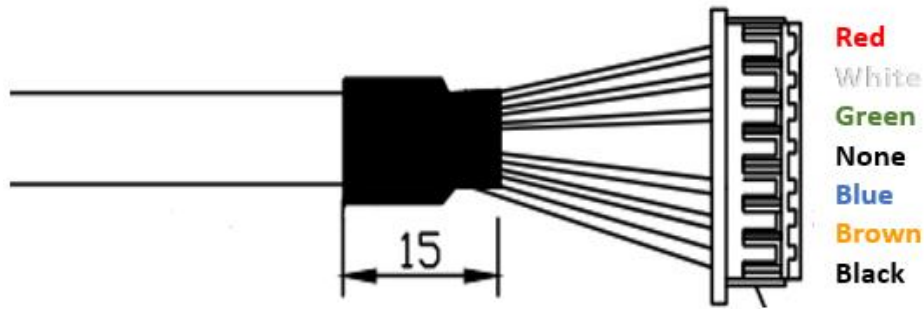


Figure 5 New Line Sequence of TF03

Table 2 Pin functions and connection instructions of TF03

No.	Color	Pin	Function
1	Red	VCC	Power supply
2	White	RS485-B/RS232-RX	RS485-B/RS232 receive
3	Green	RS485-A/RS232-TX	RS485-A/RS232 transport
4	N/A	N/A	N/A
5	Blue	UART_RX	UART receive(debug ¹)
6	Brown	UART_TX	UART transport(debug)
7	Black	GND	Ground

Note: If UART is used, the TTL_RXD and TTL_TXD must be connected and not allowed to be left floating, so as not to be affected by electromagnetic interference.

3.2 Electrical Characteristics

New version has overvoltage and polarity protection.

Table 3 Main electrical parameters

Parameter	Typical value
Supply voltage	5V~24V
Average current	≤ 150mA

¹ The UART interface of TF03-100 RS485 version is debugging interface. It cannot be used to read detection data.



Average power consumption	≤1W
Overvoltage protection	300V
Polarity protection	200V

4 Hardware and communication protocol

The industrial version of TF03 supports two communication interfaces, RS485 and RS232. The default interface is RS485. These two interfaces cannot work simultaneously. The communication interface can be switched by command.

4.1 Hardware protocol

TF03 supports two communication interfaces, RS485 and RS232. See the hardware protocol parameters below.

Table 4 Hardware protocol of TF03

Item	Parameter
Communication interface	RS485/RS232
Baud rate	115200
Data bit	8
Stop bit	1
Parity	None

4.2 Communication interface

The output data (hexadecimal numbers) of TF03 is shown in



 


Table 5. Each data frame consists of 9 bytes and the data contains the distance and signal strength² information.

² New version of TF03 adds strength information. Strength value is between 0 and 3500, threshold of strength is 40, when strength is lower than 40, dist will output maximum value. When strength is between 40 and 1200, dist is more reliable. When there is a high reflectivity object, strength will be over 1500.



Table 5 TF03 UART data format

Data bit	Definition	Description
Byte0	Frame header	0x59
Byte1	Frame header	0x59
Byte2	DIST_L	DIST low 8-bits
Byte3	DIST_H	DIST high 8-bits
Byte4	Strength_L	Signal strength low 8-bits
Byte5	Strength_H	Signal strength high 8-bits
Byte6	Reserved bit	/
Byte7	Reserved bit	/
Byte8	Checksum	Low 8 bits of Checksum bit. Checksum = Byte0 + Byte2+...+Byte7

5 Custom configuration

5.1 Protocol description

To meet the need of different customers, parameters can be set by yourselves. Parameters, such as data format, frame rate could be changed by sending command. Parameter will be stored in flash after configured successfully and customers don't need to configure again when restart.

Please change the parameter according to certain demands and do not frequently try irrelevant instructions. Please configure the product according to the demands of the manual and never send unstated command.

Table 6 Description of TF03 instruction protocol

Byte	Definition	Description
Byte0	Head	Fixed to 0x5A
Byte1	Len	The length of the entire instruction frame (unit: Byte)
Byte2	ID	Identifies the function of each instruction
Byte3~ByteN-2	Payload	Different meanings and lengths in different ID instruction frames
ByteN-1	Check sum	the lower 8 bits of the Len-1-byte data



5.2 Instruction protocols

Table 7 List of TF03 instruction protocols

Function	Command	Response	Remark	Default setting
Obtain firmware version	5A 04 01 5F	5A 07 01 V1 V2 V3 SU	The version number V3.V2.V1 SU is check sum	/
System reset	5A 04 02 60	Succeed: 5A 05 02 00 61 Fail: no response over 1s	/	/
Frame rate ³	5A 06 03 LL HH SU	Succeed: 5A 06 03 LL HH SU Fail: no response over 1s	/	100fps
Output control	Enable: 5A 05 07 01 67 Disable: 5A 05 07 00 66	Succeed: same as downward command Fail: no response over 1s	/	Enable
Trigger command	5A 04 04 62	Data frame	/	/
Output format	5A 05 05 LL SU	Succeed: 5A 05 05 LL SU Fail: no response over 1s	LL: format shown as below, 00: ASCII (Reserved) 01: Binary output	Binary output
Modify baud rate ⁴	5A 08 06 H1 H2 H3 H4 SU	Succeed: 5A 08 06 H1 H2 H3 H4 SU	See chapter 4.3.3	115200

³ New version of TF03 can only support $(1\sim 9) * 10^N$, N values for 0, 1, 2, 3. If other value is set, TF03 will set it to 100Hz. If 10000Hz is necessary, please contact our technician.

⁴ Baud rate of UART can be set to 9600, 14400, 19200, 38400, 56000, 57600, 115200, 128000, 230400, 256000, 460800,



		Fail: no response over 1s		
Enable checksum	Enable: 5A 05 08 01 68 Disable: 5A 05 08 00 67	Succeed: same as command Fail: no response over 1s	/	Enable
Restore factory settings	5A 04 10 6E	Succeed: 5A 05 10 00 6F Fail: 5A 05 10 ER SU	Fail (when ER is not 0)	/
Save settings	5A 04 11 6F	Succeed: 5A 05 11 00 70 Fail: 5A 05 11 ER SU	same as above	/
Over range threshold value	5A 06 4F LL HH SU	Succeed: 5A 05 4F 00 AE Fail: no response over 1s	Unit: cm See chapter 4.3.3	18000
Communication interface	UART: 5A 05 45 01 A5 CAN: 5A 05 45 02 A6	Succeed: 5A 05 45 00 A4 Fail: no response over 1s	/	UART
Rain-fog algorithm	Enable: 5A 05 64 00 C3 Disable: 5A 05 64 01 C4	Succeed: 5A 05 64 00 C3 Fail: no response over 1s	/	Enable
Offset configuration ⁵	5A 06 69 LL HH SU	Succeed: 5A 05 69 00 C8 Fail: no response over 1s	Unit: cm See chapter 4.3.3	0
Switch communication interface	5A 05 45 CI SU	Succeed: 5A 05 45 00 A4 Fail: no response over 1s	CI: communication interface 0x01: RS232 0x03: RS485	RS485

500000, 512000, 600000, 750000, 921600 and 1000000, if other value is set, TF03 will set it to 115200.

⁵ "Offset configuration" can be used for secondary calibration of distance, for example, when dist is 195cm and you want LiDAR outputs 200cm, you can set offset value to 5cm. This function is supported from v1.11.3 firmware version.



Enable Modbus	5A 05 6F 00 CE	Succeed: 5A 05 6F 00 CE Fail: no response over 1s	Restart to take effect	Disable
Set Modbus address	5A 05 70 AD SU	Succeed: 5A 05 70 00 CF Fail: no response over 1s	AD: Modbus communication address. Effective range: [1,247]	0x01

5.3 Instructions of command editing

To send certain command to TF03, these steps should be followed:

- Change value of parameter to HEX
- Put the HEX value to certain command
- Calculate the checksum, put low 8-bits into command

For example, changing the baud rate to 460800, first, changing 460800 to HEX, we can get 0x00 07 08 00, then we can get this command-5A 08 06 00 08 07 00 77.

6 Modbus description

TF03 Modbus adopts a 2-wire interface. For the line sequence, see the physical interface description-line sequence description; for the check and baud rate setting, see the communication protocol and data format. For custom parameter configuration, you need to switch to serial port mode to set the baud rate.

The TF03 RS485 interface is in half-duplex mode. Based on reliability considerations, it is not recommended to use a baud rate above 115200 for communication.

6.1 Protocol description

When Modbus protocol is enabled, the Modbus reading distance command format:

Table 8 Distance reading command of TF03 RS485 Modbus

Address field	Function code	Register address		Number of bytes read		CRC_low	CRC_high
01	03	00	00	00	01	xx	xx

The data frame returned by TF03 is as follows:



Address field	Function code	Data length	Dist_high	Dist_low	CRC_low	CRC_high
01	03	02	xx	xx	xx	xx

6.2 Function code

The functions supported by the Modbus protocol are relatively simple, only two function codes are open

Table 9 Function code of TF03's Modbus

Function code	description
03	Read register
06	Write register

6.3 Register address description

Table 10 Register address list of Modbus protocol (Function code: 0x03)

Register address	Definition	Description
00 00	Dist	Distance
00 01	Strength	Signal strength
00 03	Timestamp (16 high-order bits)	Unit: ms
00 04	Timestamp (16 low-order bits)	Unit: ms
00 06	High16bit of software version	00 + major version number
00 07	Low16bit of software version	Minor version number + revised version number

Table 11 Register address list of Modbus protocol (Function code: 0x06)

Register address	Definition	Description
00 80	Save settings	Write any value to take effect
00 81	Restart	Instruction value: 0x01
00 82	Disable Modbus	Instruction value: 0x01
00 83	Baud rate (16 high-order bits)	Restart to take effect
00 84	Baud rate (16 low-order bits)	Restart to take effect



00 85	Slave ID	Set TF03's ID. Restart to take effect
00 86	fps	Restart to take effect
00 87	Working mode	0x00: Continuously detection mode 0x01: triggering mode
00 89	Restore default	Write any value to take effect

6.4 Instruction protocols

The default address field is 0x01.

Table 12 Instruction protocols of Modbus

Category	Function	Instruction	Response	Description
UART instructions	Enable Modbus	5A 05 15 01 75	5A 05 15 01 75	Save settings and restart to take effect.
	Save settings	5A 04 11 6F	5A 05 11 00 70	
Modbus instructions	Read distance	01 03 00 00 00 01 84 0A	01 03 02 DH DL CL CH	DH: 8 high-order bits of distance DL: 8 low-order bits of distance CH: 8 high-order bits of CRC CL: 8 low-order bits of CRC
	Read distance and signal strength	01 03 00 00 00 02 C4 0B	01 03 04 DH DL SH SL CL CH	DH: 8 high-order bits of distance DL: 8 low-order bits of distance SH: 8 high-order bits of signal strength SL: 8 low-order bits of signal strength
	Read software version	01 03 00 06 00 02 24 0A	01 03 04 00 VM VS VC CL CH	The software version is VM.VS.VC






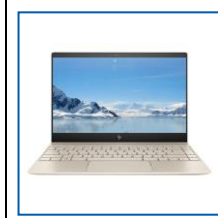

Set Baud rate	01 06 00 83 BH1 BH2 CL CH 01 06 00 84 BL1 BL2 CL CH	01 06 00 83 BH1 BH2 CL CH 01 06 00 84 BL1 BL2 CL CH	For example, set baud rate to 9600 (0x00002580) BH1=00 BH2=00 CL=78 CH=22 BL1=25 BL2=80 CL=D2 CH=D3
Set Slave ID	01 06 00 85 IH IL CL CH	01 06 00 84 IH IL CL CH	Set slave ID to 0x02, IH=00 IL=02 CL=19 CH=E2
Set frame rate	01 06 00 86 FH FL CL CH	01 06 00 86 FH FL CL CH	Set frame rate to 100 (0x0064) , FH=00 FL=64 CL=69 CH=C8
Save settings	01 06 00 80 00 00 88 22	01 06 00 80 00 00 88 22	Restart to take effect
Disable Modbus	01 06 00 82 00 01 E8 22	01 06 00 82 00 01 E8 22	Save settings and restart to take effect

7 Quick Test Procedure

7.1 Required Tools of Product Test

Note: the product package contains only TF03 and factory certificate, other accessories are prepared by yourself. If you need RS485-USB convert board, please contact sales or technical support. The UART version needs a RS485-USB board when connected with computer. Tools and method are shown as below.

Table 13 Tools of test

				
TF03(UART)	RS485-USB Board	USB Cable	PC	TF display application

7.2 Test procedure

- 1) Download the TF display application



Please download the TF display application from <http://en.benewake.com/support>Note: Please close the antivirus software before unpacking the TF display application, otherwise the files will be deleted as viruses. The TF display application currently only supports running on the Windows system. See Attachment 1: Instruction of TF Series PC Display Software.

2) Connecting

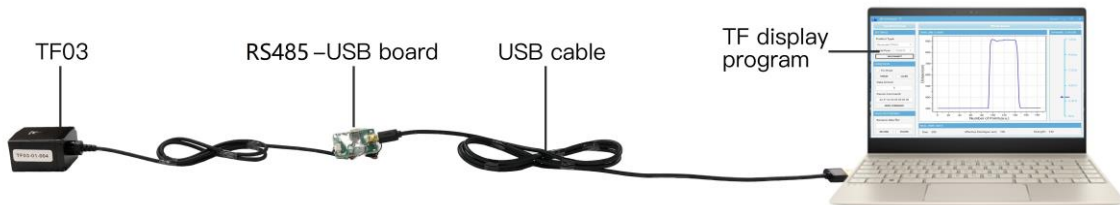


Figure 6 Diagram of connection

As Figure 6 shown, connect 『TF03』 and 『RS485-USB board』 and 『USB cable』 , ensure no looseness, then connect 『USB cable』 with 『computer』 .

3) TF display software connection and reading

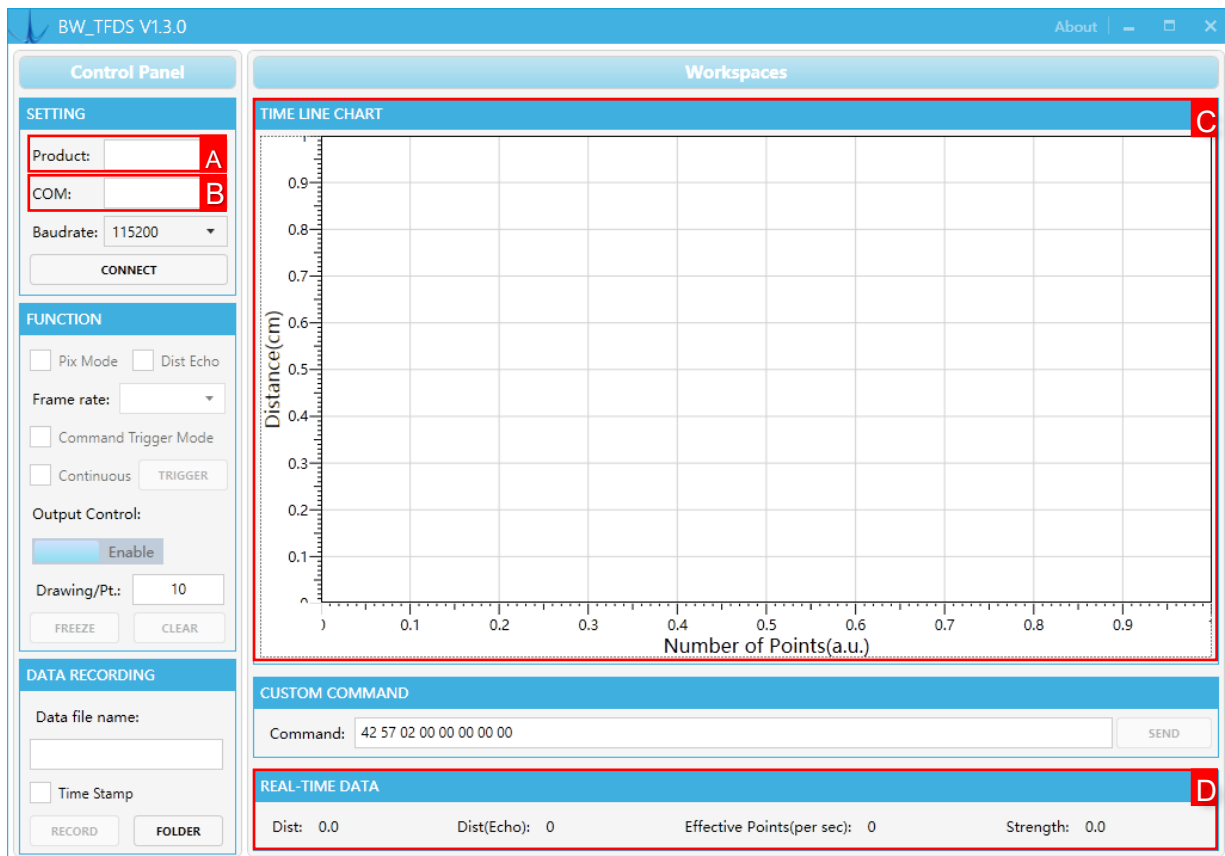


Figure 7 The interface of TF display software

As shown in Figure 7, test steps are shown as below:

- Open the TF display application



- Select product model 『TF03』 in area A
- Select serial port number in area B.
- Click 『CONNECT』 to establish the communication.
- After connected Successfully, continuous data curve will be shown in the area C 『TIME LINE CHART』 and area D 『REAL TIME DATA』 will display the current distance (Unit: cm) and frame rate (Effective Points).

7.3 Test Example

7.3.1 Test Range with Different Reflectivity

As shown in Figure 8, red and blue curves represent the relationship between range performance of TF03-180 and reflectivity of the target under different ambient light situation.

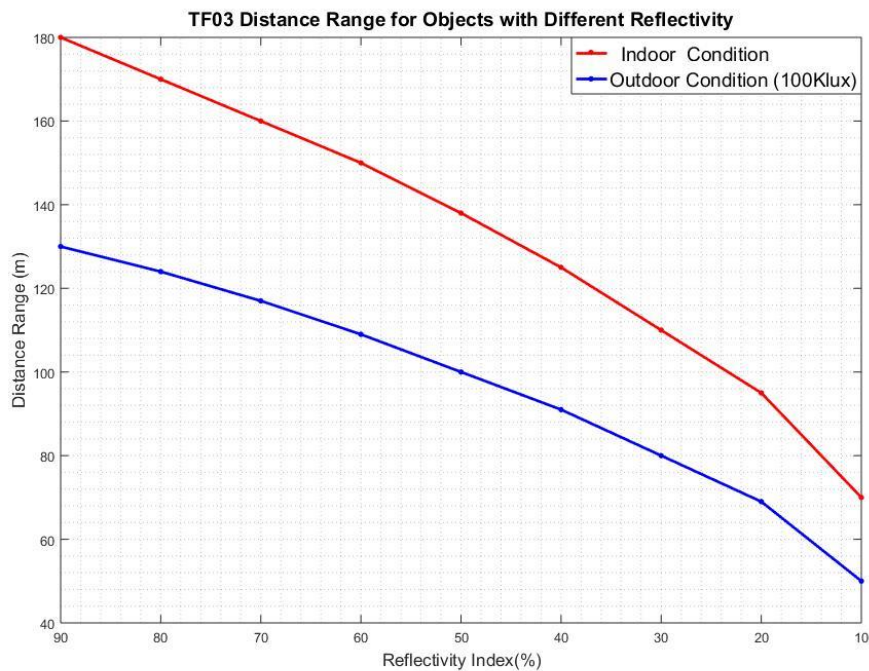


Figure 8 The relationship between range performance of TF03-180 and reflectivity

7.3.2 Accuracy of Different Materials

The accuracy of TF03 at different distances and reflectivity is shown in Figure 9. Two typical background boards(black and white) are selected. The reflectivity of whiteboard is 90% and blackboard is 10%.



TF03 Accuracy Results For Targets With Different Reflectivity At Varying Distance

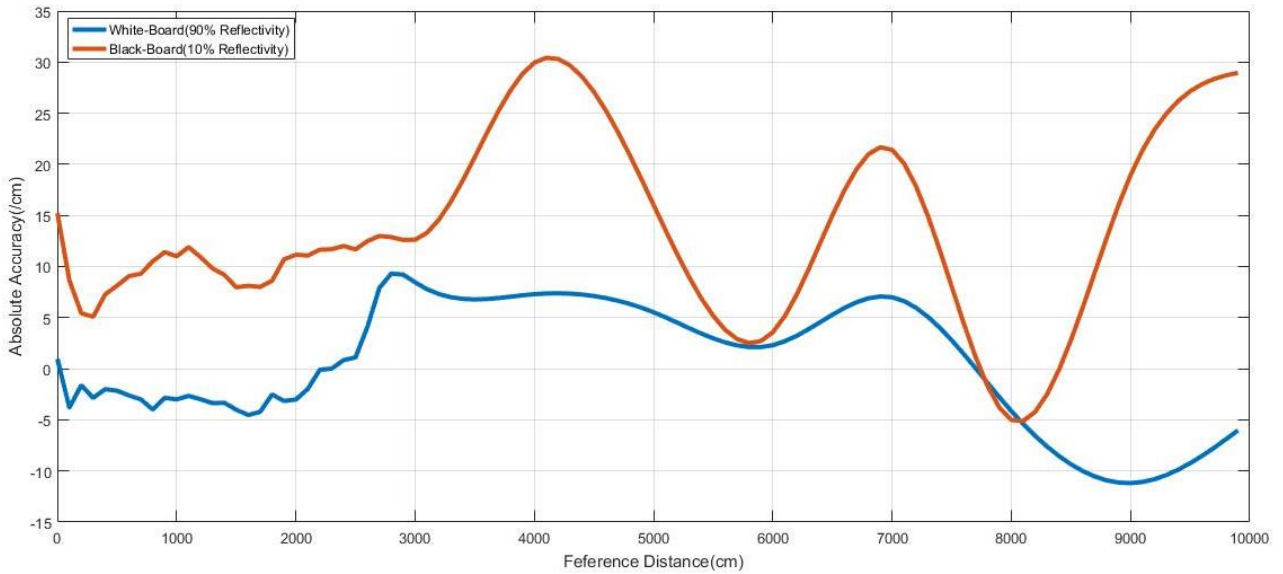


Figure 9 Error curves of TF03 at different distance and reflectivity
(Test environment: 25°C, indoor without ambient light)

8 Configuration Software of TF03

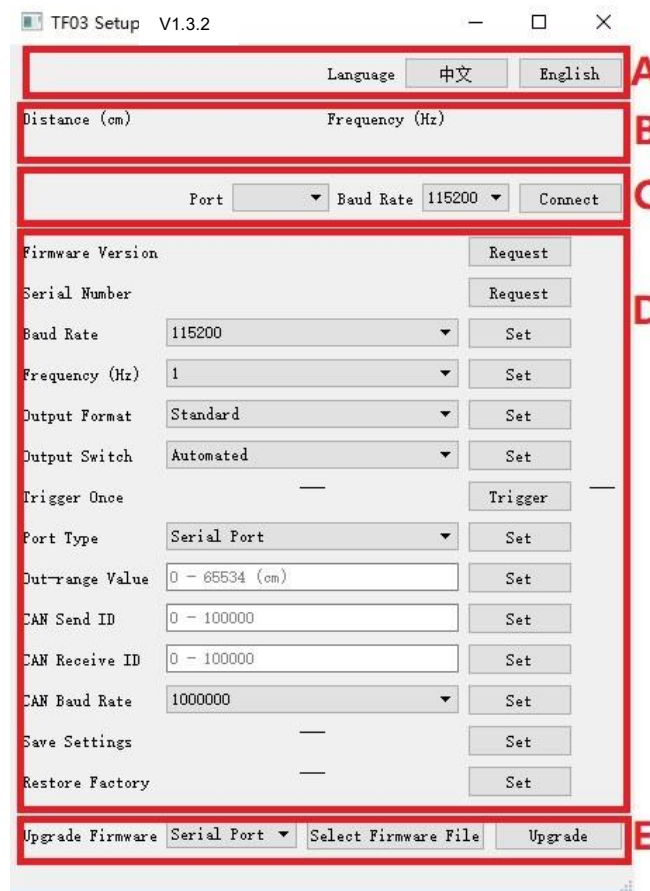


Figure 10 The interface of configuration software



Interface of configuration software is shown above.

- 1) After TF03 is connected to the computer, select the correct serial port number and baud rate in Zone C manually and click the 『Connect』 button to establish communication between the software and TF03.
- 2) After communication is established successfully, zone B will display the distance and frequency of data. When no data is received over two seconds, the distance and frequency display will disappear.
- 3) Zone D is dedicated to function configuration and its third column lists the buttons for sending instructions. After clicking such buttons, the configuration software will send commands and wait for reply from TF03. When no reply is received for a long time, 『No Response』 will be displayed on the right side of the instruction-sending buttons. Please note that in order to ensure that TF03 reply instructions can be obtained normally, lower the 『frame rate』 or set the 『output mode』 as 『instruction trigger』 before configuration. If the changed parameters need to be saved, click 『Save Configuration』 before power down TF03.
- 4) Zone E is dedicated to firmware upgrade, Bootloader can be used to upgrade the firmware.

9 Failure reasons and troubleshooting

- 1) Under normal operation, TF03 sometimes will output 18000(cm).

Reasons: The actual distance measured is beyond the range of TF03, TF03 will output 18000.

Troubleshooting: Treat 18000 as an exception value. When you receive 18000 from TF03, don't adopt this data.

- 2) No data output after TF03 is connected to the TF display application.

Reason I : The computer uses and operating system other than Windows.

Troubleshooting: Currently, the TF display application can only support the Windows operating system. Use a computer with the Windows system installed.

Reason II : Poor connection between TF03 and computer.

Troubleshooting: Please confirm that TF03 is correctly and reliably connected to the computer, and ensure that the cables and adapter board work properly.

- 3) TF03 has a poor range performance in some cases.

Reason: TF03 bases on the time-of-flight (TOF) principle, to achieve ranging by calculating the round-trip time of flight of laser pulses. The intensity of ambient light or the reflectivity of objects under testing is different, and thus will increase the intensity of ambient noise or return light intensity. Therefore, the ranging performance of TF03 varies with different ambient light intensities and reflectivity.

Troubleshooting: Under different ambient light intensity and reflectivity of objects, having different range performance is a normal phenomenon and does not affect the accuracy or repeatability.

10 FAQ

Q1: Can the FOV (spot) of TF03 be increased or decreased?

A1: Generally, this is a customized demand. You need to contact our sale colleague for further details. FOV is determined at the beginning of product design. Determination of FOV is also related to the optical system and the product structure. Therefore, it cannot be easily changed, and needs to be customized.

Q2: Can I change the frequency of data output? Can TF03 output switching values?

A2: Yes, customization of parameter configuration and adjustment of output modes have been enabled for TF03. However, switching values have to be customized according to requirement. You may consult our sales colleague or technical support for further details.

Q3: Can TF03 work normally under raining, snowing and fog?

A3: TF03 has a firmware version which support this function. Contact our sale colleague or technical support for firmware upgrade. The algorithm is turned on by default in V1.11.15.

Attachment 1: Reflectivity of Different Materials

The reflectivity of different materials is listed below, ranging from low to high. According to the test target and the corresponding reflectivity, we can measure whether the range of TF03 and other parameters meet the requirements.

No.	Materials	Reflectivity
1	black foam rubber	2.4%
2	black cloth	3%
3	black rubber	4%
4	Coal (varies from coal to coal)	4~8%
5	Black car paint	5%
6	Black paper	10%
7	opaque black plastic	14%
8	Clean rough board	20%
9	newspapers	55%
10	translucent plastic bottles	62%
11	packing case cardboard	68%
12	Clean pine	70%
13	opaque white plastic	87%
14	white card	90%
15	Kodak standard whiteboard	100%
16	Unpolished white metal surface	130%
17	Shiny light metal surface	150%
18	stainless steel	200%
19	Reflective board, reflective adhesive tape	>300%

